


Directions

- 1. Position stencil:**
 - Use the supplied YD-PCF1A-C backplates stencil.
 - Tape to the bulkhead/door backboard, keeping it level.
- 2. Mark holes:** Use a centre punch through the stencil to mark where you will drill.
- 3. Drill holes:**
 - Work your way up to a 10mm pilot hole
 - Enlarge to 16.8mm with a standard bit or the YD PC-F1A drill bit.
- 4. Fit clips:** Insert **C** using the YD PC-F1A tapping bit (available from our website).
- 5. Fit clips:** Insert **B** into **A** by hand.
- 6. Install product:** Tap clips fully into place.

Tools and Materials

- YD-PCF1A-C stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Drill with:
 - 10mm bit (increase to this)
 - 16.8mm or YD PC-F1A drill bit
- YD PC-F1A tapping bit

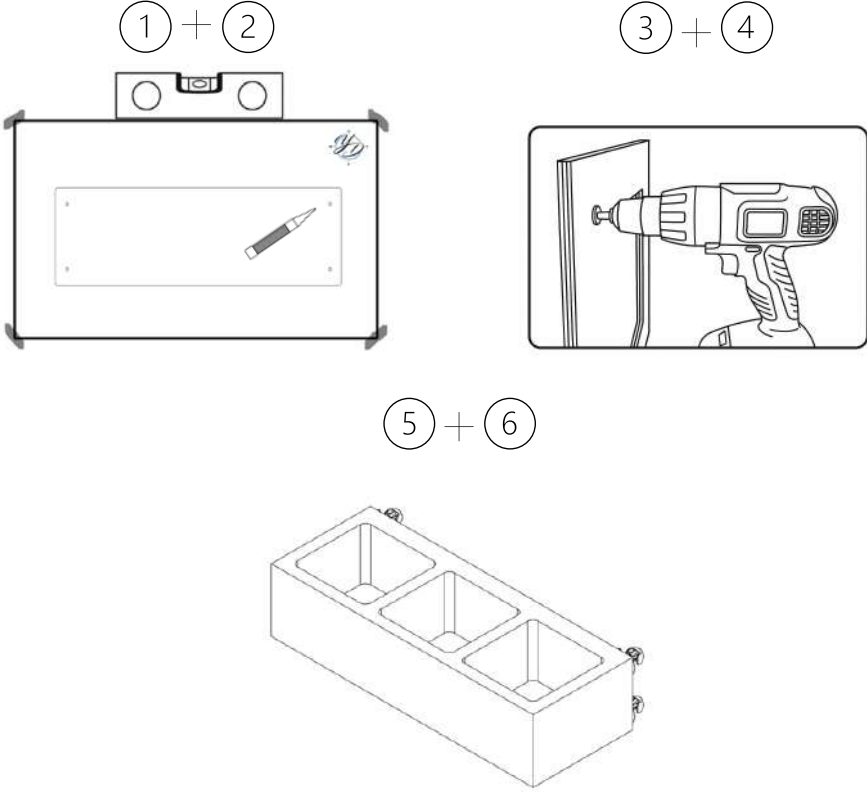

3-Compartment Utility Storage Holder (UT-CMP-3)			
A		MAIN PIECE	1x
B		YD-PCM2H-C	4x
C		YD-PCF1A-C	4x