Directions

PLEASE NOTE: *For best results, we recommend installing all Yacht Dapper® products horizontally on the bulkhead/door backboard template rather than vertically.*

1. **Position stencil:**
   - Use the supplied product stencil.
   - Tape to the bulkhead/door backboard, keeping it level.
2. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
3. **Drill holes:**
   - Work your way up to a 10mm pilot hole (recommended bits: no.5, 8, 10).
   - Enlarge to 16.8mm using our YD drill bit (available from our website).
4. **Fit clips:** With light pressure, insert **C** using our YD tapping bit (available from our website).
5. **Install product:** Fit **B** into **A** by hand, then install holder fully into place.


3-Compartment Utility Storage Holder (UT-CMP-3)			
A		MAIN PIECE	**1x**
B		MALE CLIP	**4x**
C		FEMALE CLIP	**4x**

Tools and Materials


- Product stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Hand drill
- Drill with:
  - 10mm bit (increase with bits no.5, 8, then 10)
  - YD drill bit
- YD tapping bit

ESSENTIAL TOOLS	
YD DRILL BIT	
YD TAPPING BIT	

① + ②

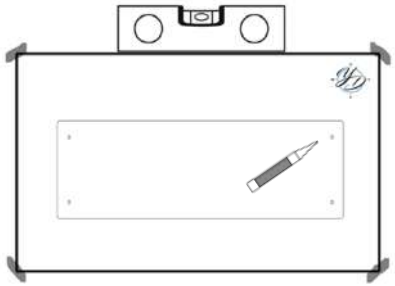

③ + ④

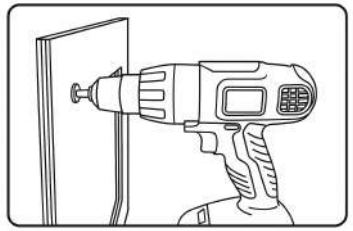

⑤

