Directions

PLEASE NOTE: *For best results, we recommend installing all Yacht Dapper® products horizontally on the bulkhead/door backboard template rather than vertically.*

The spacing between the top and bottom pieces is entirely up to your preference.


1. **Rust treat all bolts** before assembling.
2. Join parts **A** to **B**, using **H**.
3. Join parts **C** to **A**, using **G**.
4. Join parts **D** to **E**, using **I**.
5. Join parts **F** to (**D** and **E**), using **I**.
6. **Position stencil:**
   - Use the supplied product stencil (same for the top and bottom).
   - Tape to the bulkhead/door backboard, keeping it level.
7. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
8. **Drill holes:**
   - Work your way up to a 10mm pilot hole (recommended bits: no.5, 8, 10)
   - Enlarge to 16.8mm using our YD drill bit (available from our website).
9. **Fit clips:** With light pressure, insert **J** using our YD tapping bit (available from our website).
10. **Fit clips:** Fit **J** into (**B** and **E**) by hand, then install holder fully into place

6-Slot Pole Storage Holder (PL-HLD-6)			
A		TOP PIECE	1x
B		TOP BACKPLATE	1x
C		POLE C-CLIP	6x
D		BOTTOM PIECE	1x
E		BOTTOM BACKPLATE	1x
F		BOTTOM SUPPORT PLATE	1x
G		M4X12 INTERSCREW	6x
H		M6X40 BOLT	2x
I		M6X20 BOLT	5x
J		MALE CLIP	10x
K		FEMALE CLIP	10x

Tools and Materials


- Rust protection spray or coating
- Allen key (no. 2.5 and 5.5)
- Product stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Hand drill
- Drill with:
  - 10mm bit (increase with bits no.5, 8, then 10)
  - YD drill bit
- YD tapping bit

6 + 7

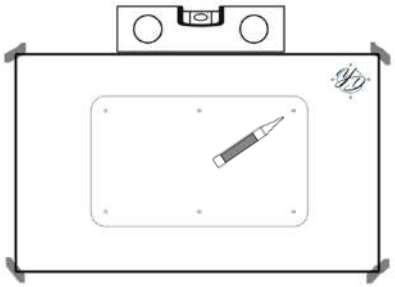


ESSENTIAL TOOLS	
YD DRILL BIT	
YD TAPPING BIT	


1

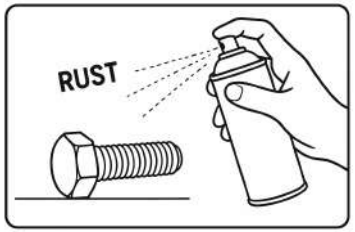

8 + 9

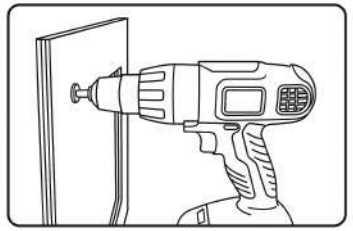

2 + 3 + 4 + 5

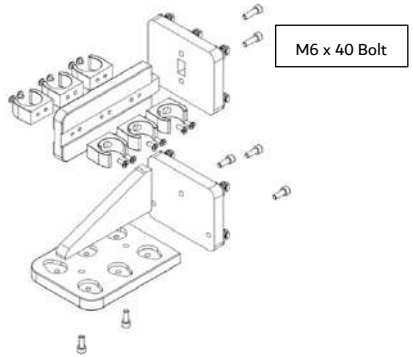

10

