


Directions

- 1. **Position stencil:**
  - Use the supplied YD-PCF1A-C backplates stencil.
  - Tape to the bulkhead/door backboard, keeping it level.
- 2. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
- 3. **Drill holes:**
  - Work your way up to a 10mm pilot hole
  - Enlarge to 16.8mm with a standard bit or the YD PC-F1A drill bit
- 4. **Fit clips:** Insert C using the YD PC-F1A tapping bit (available from our website).
- 5. **Install product:** Tap clips fully into place.

Tools and Materials

- YD-PCF1A-C stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Drill with:
  - 10mm bit (increase to this)
  - 16.8mm or YD PC-F1A drill bit
- YD PC-F1A tapping bit

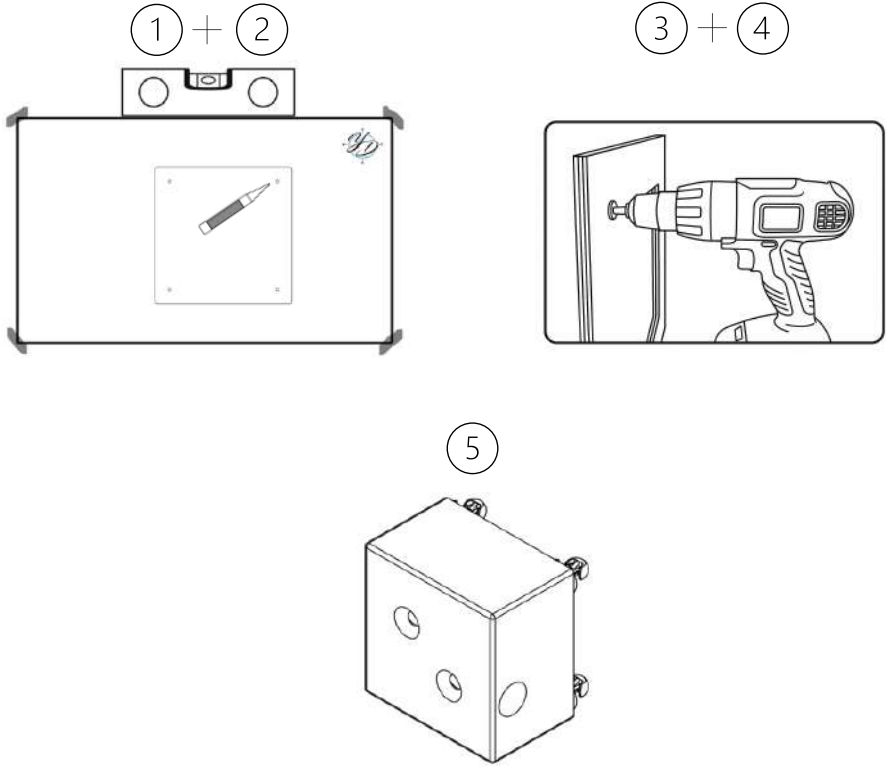

| Dual Deck Squeegee Storage Holder (DS-HLD-2) |                                                                                     |            |    |
|----------------------------------------------|-------------------------------------------------------------------------------------|------------|----|
| A                                            |    | MAIN PIECE | 1x |
| B                                            |  | YD-PCM2H-C | 4x |
| C                                            |  | YD-PCF1A-C | 4x |