Directions

PLEASE NOTE: *For best results, we recommend installing all Yacht Dapper® products horizontally on the bulkhead/door backboard template rather than vertically.*

The spacing between the top and bottom pieces is entirely up to your preference.


1. **Rust treat all bolts** before assembling.
2. Join parts **B** to **A**, using **E.**
3. Join parts **C** to **D**, using **F.**
4. **Position stencil:**
   - Use the supplied product stencil (same for the top and bottom).
   - Tape to the bulkhead/door backboard, keeping it level.
5. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
6. **Drill holes:**
   - Work your way up to a 10mm pilot hole (recommended bits: no.5, 8, 10)
   - Enlarge to 16.8mm using our YD drill bit (available from our website).
7. **Fit clips:** With light pressure, insert **H** using our YD tapping bit (available from our website).
8. **Install product:** Fit **G** into (**A** and **D**) by hand, then install holder fully into place.

Dual Pole Storage Holder (PL-HLD-2)			
A		TOP PIECE	1x
B		POLE C-CLIP	2x
C		BOTTOM PIECE	1x
D		BOTTOM BACKPLATE	1x
E		M4X16 BOLT	4x
F		M6X20 BOLT	4x
G		MALE CLIP	8x
H		FEMALE CLIP	8x

Tools and Materials


- Rust protection spray or coating
- Allen key (no. 2.5 and 5.5)
- Product stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Hand drill
- Drill with:
  - 10mm bit (increase with bits no.5, 8, then 10)
  - YD drill bit
- YD tapping bit

4 + 5

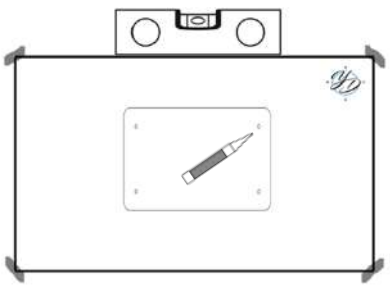


ESSENTIAL TOOLS	
YD DRILL BIT	
YD TAPPING BIT	


1

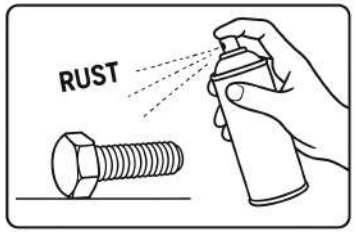


6 + 7

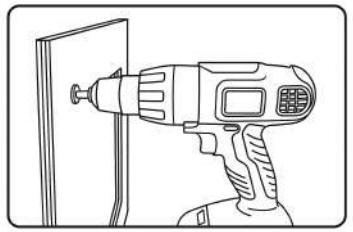

2 + 3

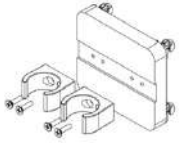

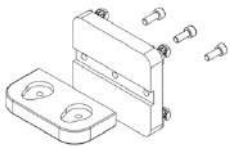

8

