






Directions

1. **Rust treat all bolts** before assembling.
2. Join parts **A** to **C**, using **E**.
3. Join parts **B** to **C**, using **E**.
4. Join parts **D** to **C**, using **E**.
5. **Position stencil:**
 - Use the supplied YD-PCF1A-C backplates stencil.
 - Tape to the bulkhead/door backboard, keeping it level.
6. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
7. **Drill holes:**
 - Work your way up to a 10mm pilot hole
 - Enlarge to 16.8mm with a standard bit or the YD PC-F1A drill bit
8. **Fit clips:** Insert **G** using the YD PC-F1A tapping bit (available from our website).
9. **Install product:** Tap clips fully into place.


Dual Wash Mitt Storage Holder (WM-HLD-2)			
A		FRONT FACE	1x
B		MIDDLE FACE	1x
C		BRIDGE	1x
D		BACKPLATE	1x
E		M6X20 BOLT	6x
F		YD-PCM2H-C	4x
G		YD-PCF1A-C	4x

Tools and Materials

- Rust protection spray or coating
- Allen key (no. 5.5)
- YD-PCF1A-C stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Drill with:
 - 10mm bit (increase to this)
 - 16.8mm or YD PC-F1A drill bit
- YD PC-F1A tapping bit

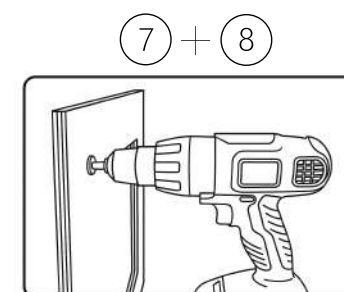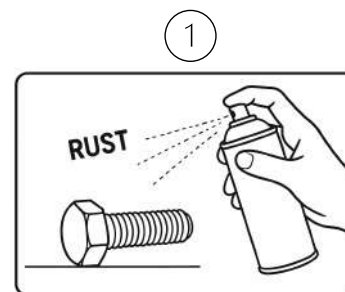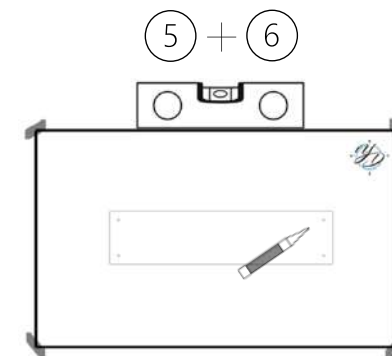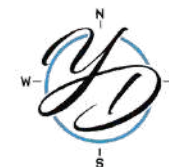

2 + 3 + 4

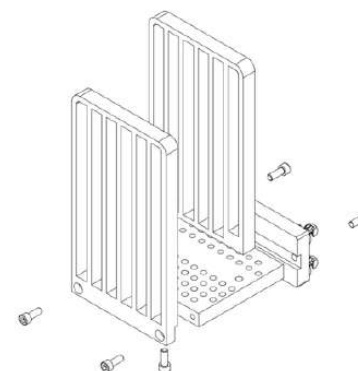

9

