

Directions

1. Position stencil:

- Use the supplied YD-PCF1A-C backplates stencil (same for top and bottom).
- Tape to the bulkhead/door backboard, keeping it level.

2. Mark holes:

Use a centre punch through the stencil to mark where you will drill.

3. Drill holes:

- Work your way up to a 10mm pilot hole
- Enlarge to 16.8mm with a standard bit or the YD PC-F1A drill bit

4. Fit clips:


Insert **D** using the YD PC-F1A tapping bit (available from our website).

5. Install product:

Tap clips fully into place.

Tools and Materials

- YD-PCF1A-C stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Drill with:
 - 10mm bit (increase to this)
 - 16.8mm or YD PC-F1A drill bit
- YD PC-F1A tapping bit

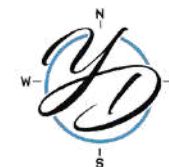

Dual Water Blade Storage Holder (WB-HLD-2)			
A		TOP PIECE	1x
B		BOTTOM PIECE	1x
C		YD-PCM2H-C	4x
D		YD-PCF1A-C	4x

