
Directions

PLEASE NOTE: *For best results, we recommend installing all Yacht Dapper® products horizontally on the bulkhead/door backboard template rather than vertically.*

The spacing between the top and bottom pieces is entirely up to your preference.

1. **Position stencil:**
   - Use the supplied product stencil (same for top and bottom).
   - Tape to the bulkhead/door backboard, keeping it level.
2. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
3. **Drill holes:**
   - Work your way up to a 10mm pilot hole (recommended bits: no.5, 8, 10)
   - Enlarge to 16.8mm using our YD drill bit (available from our website).
4. **Fit clips:** With light pressure, insert **D** using our YD tapping bit (available from our website).
5. **Install product:** Fit **C** into (**A** and **B**) by hand, then install holder fully into place.


Dual Water Blade Storage Holder (WB-HLD-2)			
A		TOP PIECE	1x
B		BOTTOM PIECE	1x
C		MALE CLIP	4x
D		FEMALE CLIP	4x

Tools and Materials


- Product stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Hand drill
- Drill with:
  - 10mm bit (increase with bits no.5, 8, then 10)
  - YD drill bit
- YD tapping bit

ESSENTIAL TOOLS	
YD DRILL BIT	
YD TAPPING BIT	

① + ②

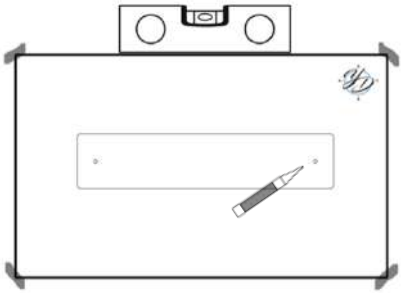

③ + ④

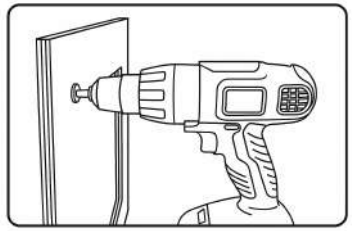

⑤

