


Directions

1. **Rust treat all bolts** before assembling.
2. Join parts **A** to **B**, using **C**.
3. **Position stencil:**
 - Use the supplied YD-PCF1A-C backplates stencil.
 - Tape to the bulkhead/door backboard, keeping it level.
4. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
5. **Drill holes:**
 - Work your way up to a 10mm pilot hole
 - Enlarge to 16.8mm with a standard bit or the YD PC-F1A drill bit
6. **Fit clips:** Insert **E** using the YD PC-F1A tapping bit (available from our website).
7. **Install product:** Tap clips fully into place.

Tools and Materials


- Rust protection spray or coating
- Allen key (no. 5.5)
- YD-PCF1A-C stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Drill with:
 - 10mm bit (increase to this)
 - 16.8mm or YD PC-F1A drill bit
- YD PC-F1A tapping bit

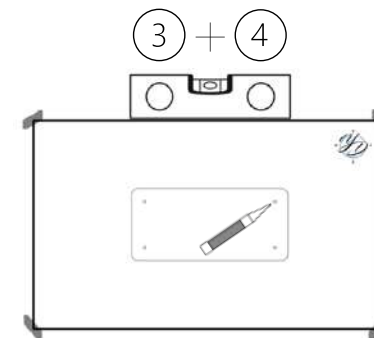


1




5 + 6

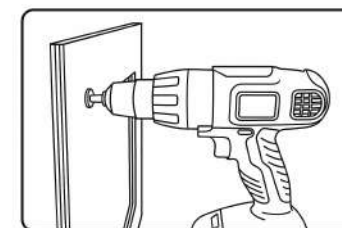

2

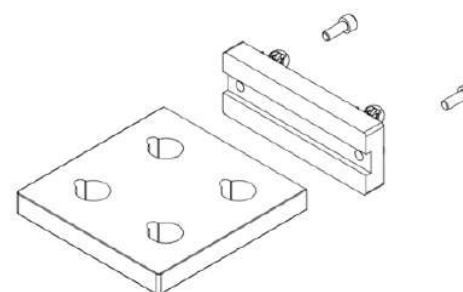

7

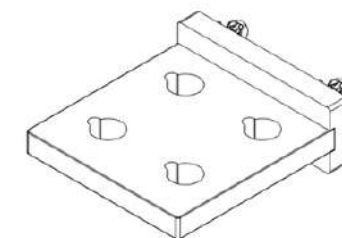

Quad Chamois Mop Storage Holder (CM-HLD-4)			
A		MAIN PIECE	1x
B		BACKPLATE	1x
C		M6X40 BOLT	2x
D		YD-PCM2H-C	4x
E		YD-PCF1A-C	4x