Directions


PLEASE NOTE: *For best results, we recommend installing all Yacht Dapper® products horizontally on the bulkhead/door backboard template rather than vertically.*

1. **Rust treat all bolts** before assembling.
2. Join parts **A** to **B**, using **C.**
3. **Position stencil:**
   - Use the supplied product stencil.
   - Tape to the bulkhead/door backboard, keeping it level.
4. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
5. **Drill holes:**
   - Work your way up to a 10mm pilot hole (recommended bits: no.5, 8, 10)
   - Enlarge to 16.8mm using our YD drill bit (available from our website).
6. **Fit clips:** With light pressure, insert **E** using our YD tapping bit (available from our website).
7. **Install product:** Fit **D** into **B** by hand, then install holder fully into place.

Tools and Materials

- Rust protection spray or coating
- Allen key (no. 5.5)
- Product stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Hand drill
- Drill with:
  - 10mm bit (increase with bits no.5, 8, then 10)
  - YD drill bit
- YD tapping bit


3 + 4

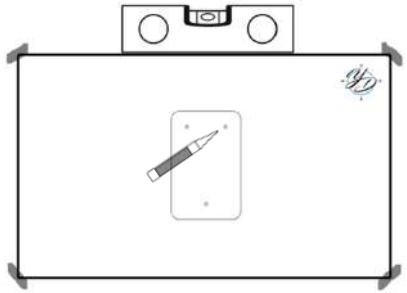


ESSENTIAL TOOLS	
YD DRILL BIT	
YD TAPPING BIT	

Quad Shock Absorber Lanyard Storage Holder (SA-HLD-4)			
A		ARM	1x
B		BACKPLATE	1x
C		M6X20 BOLT	1x
D		MALE CLIP	3x
E		FEMALE CLIP	3x


1

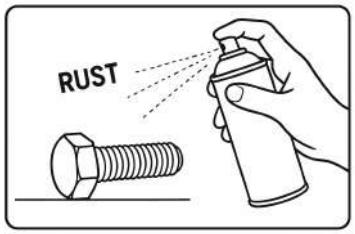

5 + 6

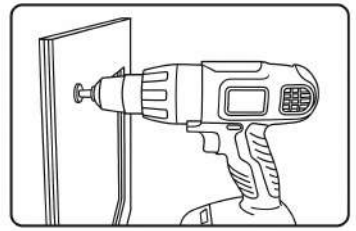

2

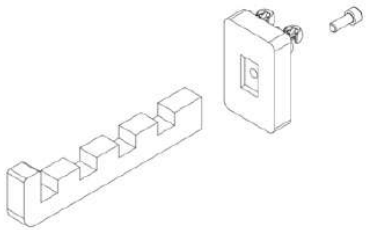

7

