
## Directions

***PLEASE NOTE:*** *For best results, we recommend installing all Yacht Dapper® products horizontally on the bulkhead/door backboard template rather than vertically.*


1. **Rust treat all bolts** before assembling.
2. Join parts **A** to **B**, using **D**.
3. Join parts **B** to **C**, using **D**.
4. **Position stencil:**
   - Use the supplied product stencil.
   - Tape to the bulkhead/door backboard, keeping it level.
5. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
6. **Drill holes:**
   - Work your way up to a 10mm pilot hole (recommended bits: no.5, 8, 10)
   - Enlarge to 16.8mm using our YD drill bit (available from our website).
7. **Fit clips:** With light pressure, insert **F** using our YD tapping bit (available from our website).
8. **Install product:** Fit **E** into **C** by hand, then install holder fully into place.

| **Single Wash Mitt Storage Holder** (WM-HLD-1) | | | |
|---|---|---|---|
| A |  | FRONT FACE | 1x |
| B |  | BRIDGE | 1x |
| C |  | BACKPLATE | 1x |
| D |  | M6X20 BOLT | 4x |
| E |  | MALE CLIP | 4x |
| F |  | FEMALE CLIP | 4x |

## Tools and Materials


- Rust protection spray or coating
- Allen key (no. 5.5)
- Product stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Hand drill
- Drill with:
  - 10mm bit (increase with bits no.5, 8, then 10)
  - YD drill bit
- YD tapping bit

4 + 5

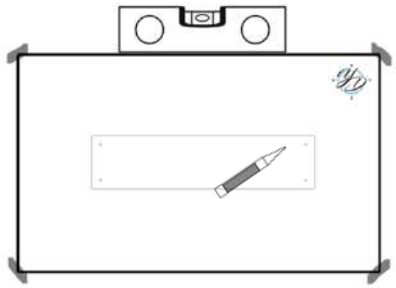


| ESSENTIAL TOOLS | |
|---|---|
| YD DRILL BIT |  |
| YD TAPPING BIT |  |


1

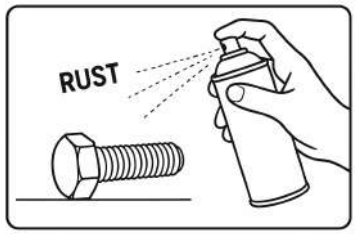


6 + 7

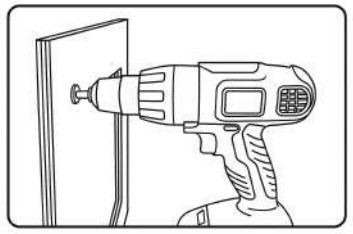

2 + 3

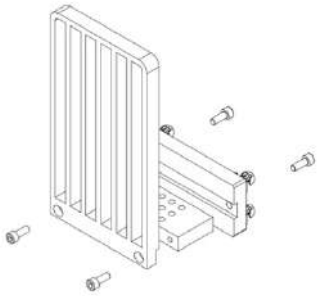

8

