
Directions

PLEASE NOTE: *For best results, we recommend installing all Yacht Dapper® products horizontally on the bulkhead/door backboard template rather than vertically.*


1. **Rust treat all bolts** before assembling.
2. Join parts **A** to **C**, using **D.**
3. Join parts **B** to **C**, using **D.**
4. **Position stencil:**
   - Use the supplied product stencil.
   - Tape to the bulkhead/door backboard, keeping it level.
5. **Mark holes:** Use a centre punch through the stencil to mark where you will drill.
6. **Drill holes:**
   - Work your way up to a 10mm pilot hole (recommended bits: no.5, 8, 10)
   - Enlarge to 16.8mm using our YD drill bit (available from our website).
7. **Fit clips:** With light pressure, insert **F** using the YD tapping bit (available from our website).
8. **Install product:** Fit **E** into **C** by hand, then install holder fully into place.

Triple Deck Squeegee Storage Holder (DS-HLD-3)			
A		LEFT ARM	1x
B		RIGHT ARM	1x
C		BACKPLATE	1x
D		M6X20 BOLT	4x
E		MALE CLIP	4x
F		FEMALE CLIP	4x

Tools and Materials


- Rust protection spray or coating
- Allen key (no. 5.5)
- Product stencil (supplied)
- Tape
- Levelling device (if needed)
- Centre punch
- Hand drill
- Drill with:
  - 10mm bit (increase with bits no.5, 8, then 10)
  - YD drill bit
- YD tapping bit

4 + 5

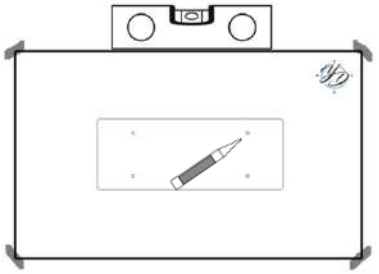


ESSENTIAL TOOLS	
YD DRILL BIT	
YD TAPPING BIT	


1

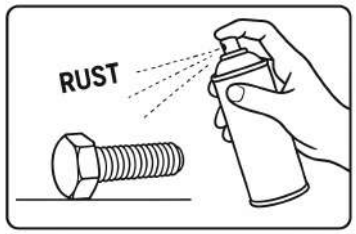

6 + 7

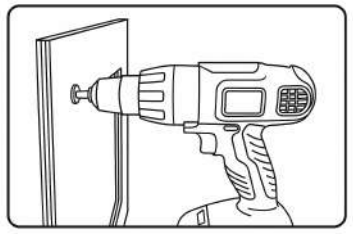

2 + 3

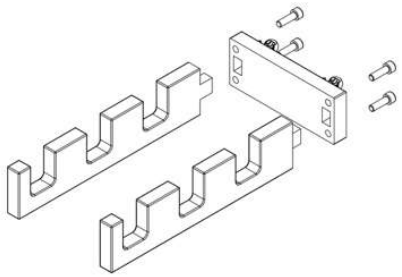

8

